DieselPower® PD Pro Module Installation

- **REMOVE RED CONNECTOR LOCK IN ROUND MULTIPLUG ON DRIVER'S SIDE OF ENGINE.**

- **TURN ROUND CONNECTOR COUNTER-CLOCKWISE AND DISCONNECT PLUG.**

- **CONNECT THE DieselPower® SUPPLIED HARNESS IN-LINE WITH YOUR VEHICLE CONNECTOR.**

- 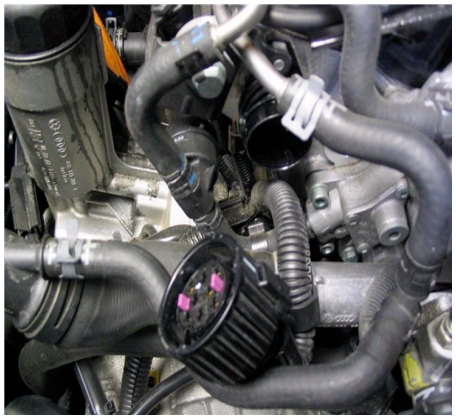 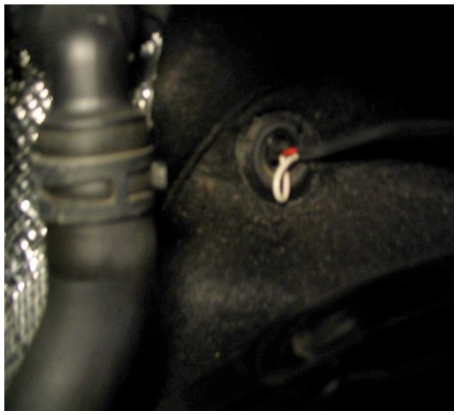

- **REMOVE THE 2 10mm BOLTS HOLDING THE BOOST SOLENOID BRACKET AND MOVE BRACKET AWAY.**

- **LOCATE AND REMOVE THE RUBBER GROMMET THAT IS BEHIND THE BOOST SOLENOID AND BRAKE BOOSTER. DRILL A SMALL HOLE IN THE GROMMET TO ACCESS THE DRIVER'S SIDE FOOTWELL AREA. INSERT THE 3 WIRES IN GROMMET HOLE AND PUSH THEM THROUGH THE FIREWALL.**

- **NOW YOU WILL NEED TO CONNECT THE WHITE WIRE TO THE WHITE/BLUE TRACER WIRE THAT IS IN THE CONNECTOR ATTACHED TO THE THROTTLE PEDAL POTENTIOMETER USING THE RED SCOTCHLOK CONNECTOR. NOW THE WHITE WIRE IN THE HARNESS SHOULD HAVE .3 VOLTS WITH KEY ON ENGINE OFF.**

-

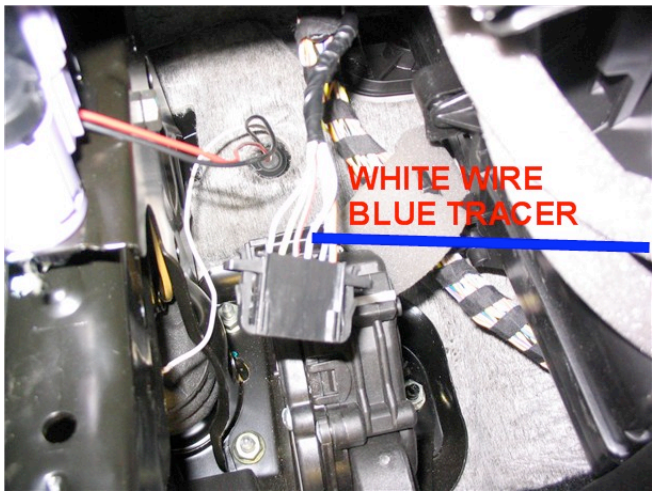

-

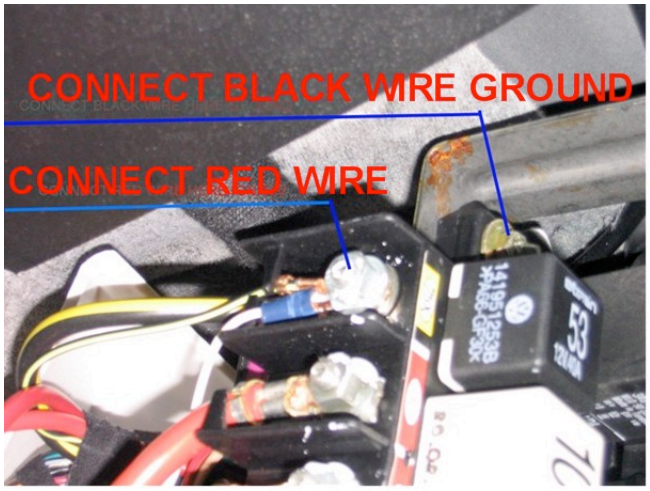

-